

## PROBORD

POLISHED AND BRUSHED STAINLESS STEEL AISI 304/1.4301-V2A




POLISHED STAINLESS ST. AISI 304/1.4301-V2A with protective film bar length 2,7 Im - pack. 15 Pcs - 40,5 Im - 10/10mm

Article	H mm	
PEBDAC 08	08	
PEBDAC 10	10	
PEBDAC 125	12,5	

COLOURS

AC - Polished stainless steel	ACS - Brushed stainless steel AISI
AISI 304/1.4301-V2A	304/1.4301-V2A

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

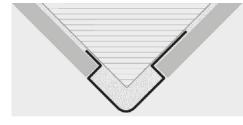

1. Choose "PROBORD" according to the tile thickness and desired finish. 2. Cut "PROBORD" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROBORD" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

BRUSHED STAINLESS ST. AISI 304/1.4301-V2A with protective film

H mm

08

10

12,5

bar length 2,7 lm - pack. 15 Pcs - 40,5 lm - 10/10mm

SUITABLE FOR USE IN CONTACT WITH FOODSTUFFS.


Article

PEBDACS 08


PEBDACS 10

PEBDACS 125


**PROEDGE FLEX** is a corner bead profile in shockproof non-toxic co-extruded colored vinyl resin composed by an internal rigid structure and by a soft external one. The profile is suitably shaped to protect the external corner of wall coverings. Its particular section and the availability in different colours make **PROEDGE FLEX** a much sought after and easy to lay profile that allows a workmanlike application.

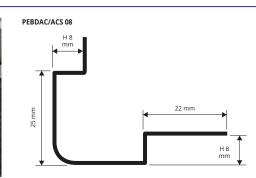



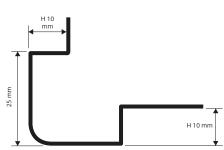



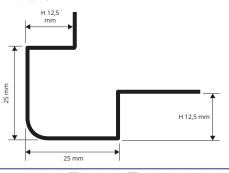

## PROEDGE FLEX

SHOCKPROOF NON - TOXIC CO-EXTRUDED COLORED VINYL RESIN



CO-EXTRUDED PVC - L 40 X 40 mm bar length 2,7 lm - pack. 15 Pcs - 40,5 lm

Ρ

Article	Hmm		A
PFC40	40		PFC40A




CO-EXTRUDED PVC WITH ADHESIVE - L 40 X 40 mm bar length 2,7 lm - pack. 15 Pcs - 40,5 lm

Article	H mm	
PFC40A	40	

 COLOURS
 AVAILABLE MINIMUM QUANTITY 100 PCS by colour and height (Price to be agreed. Production delay 4/5 weeks)

 01 - White
 09 - Yellow
 10 - Red
 11 - Black
 16 - Blue



EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

1 40 mm



1. Choose "PROEDGE FLEX" according to the desired colour. 2. Cut "PROEDGE FLEX" to the desired length. 3. Remove carefully any remains of oil, fat and dirt from the surface where the profile will be laid. 4. When the surface is perfectly dry, remove the protective film (version with adhesive), place correctly the profile and press it without hitting / apply the silicone on the surface where the profile will be laid (version without adhesive) and press it without hitting.

