

COLOURS

AA - Anodized silver alum. AO - Anodized gold alum.

VARNISHED PLASTIC JOINT - pack. 20 Pcs

Universal, suitable for three profile heights

covered with wodden flooring.

RPSYAO 08/20 RPSY... 08-10-125/20

Available: AA - AO.

Article

The code of the selected colour must be added to the article code. E.g.: RPSY... 08 (chosen colour polished brass) RPSYOL 08

**PROSTYLE** is a technical/decorative profile for ceramic tile/wood steps made in gold-silver anodized aluminium. Its particular rounded shape has been conceived to create the "torus" of the step, which is normally created with special pieces. It is knurled on the top to make the profile non-slip. Elegant profile for all public/private environments. Shrink-wrapped profile with bar code.

**PROSTEP INS** is a non-slip profile in aluminium that allows to connect the rise and the tread in case of stairs covered with wooden or laminate flooring. The profile has to be laid together with rise and tread. It is equipped with a punched flange that guarantees its fixing. **PROSTEP INS** in anodized aluminium is suitable for any stair

# PROSTYLE

14 mm

KNURLED, ROUNDED STEP NOSING GOLD AND SILVER ANODIZED ALUMINIUM

PSYAA/AO 08

# P

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

1. Choose the PROSTYLE in the required width and colour according to the thickness of the tile. 2. First fix the riser part, placing it at the correct and final height. 3. Fill the empty spaces under the profile with the tile adhesive. 4. Apply the adhesive to the tread, lay the profile with the punched base fully sunk into the adhesive and align the profile so that its vertical part covers the edge of the riser tile. 5. Lay the tread tiles, aligning them so that they are flush with the upper and rear part of the profile and filling the internal part with adhesive. Oxidation marks in the polished/natural brass range may be easily removed with specific chemical products (Sidol-Smac).



### ANODIZED SILVER ALUMINIUM thermo packed bar length 2,7 Im - pack. 20 Pcs - 54 Im

| 0.1       |      |  |
|-----------|------|--|
| Article   | Hmm  |  |
| PSYAA 08  | 8    |  |
| PSYAA 10  | 10   |  |
| PSYAA 125 | 12,5 |  |

# ANODIZED GOLD ALUMINIUM thermo packed


| bar length <b>2,7 im</b> - pack. <b>20</b> |      |  |
|--|------|--|
| Article                                    | H mm |  |


| PSYAO 08  | 8    |  |
|-----------|------|--|
| PSYAO 10  | 10   |  |
| PSYAO 125 | 12,5 |  |

# ALUMINIUM CAPS H 8 - 10 - 12,5 mm - pack. 20 Pcs

|                     | Article |   |
|---------------------|---------|---|
| <b>TPSYAO 08/20</b> |         | * |
| TPSY 08/20          |         |   |
| TPSY 10/20          |         |   |
| TPSY 125/20         |         |   |
|                     |         |   |

Available: AA - AO. The code of the selected colour must be added to the article code. E.g.: TPSY... 08 (chosen colour polished brass) TPSYOL 08.

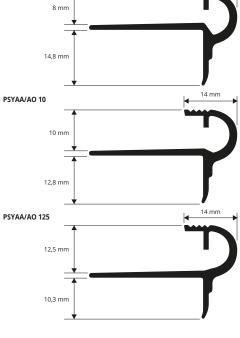



# PROSTEP INS

# ANODIZED SILVER ALUMINIUM



### ANODIZED SILVER ALUMINIUM bar length 2,7 lm - pack. 40 Pcs - 108 lm

| Article   | Hmm  |  |
|-----------|------|--|
| PTSAA 105 | 10,5 |  |
| PTSAA 16  | 16   |  |
|           |      |  |

# COLOURS

AA - Anodized silver alum.



## EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS



1. Choose "PROSTEP INS" according to the thickness of the tile. 2. Cut "PROSTEP INS" to the desired length. 3. Lay the wood or laminate on the step rise and apply adhesive on the area of the step tread, where the profile will be laid. 4. Lay the profile on the step tread, aligning it with the edge of the rise covering. 5. Lay the wood or laminate on the tread of the step taking care to insert it into the cavity.

