PROWALK is a step nosing profile in polished brass and anodized aluminium for existing steps. The upper part is knurled to increase slip and slide resistance and is applied after laying. Available with holes or with adhesive. Available in the widths 22×22 and 30×30 mm. All the profiles are shrink-wrapped. Ideal for protecting and shielding the edges and corner between riser and tread, which are the areas subjected

to most stress.

PROWALK

22 mm

stair nosing for existing steps

30 mm

POLISHED BRASS and ANODIZED ALUMINIUM ADHESIVE and PUNCHED

PWK... 22A PWK... 229AS

PWK... 30A PWK... 309AS



KNURLED POLISHED BRASS with adhesive thermo packed bar length 2,7 lm - pack. 15 Pcs - 40,5 lm

Article	H x L mm	
PWKOL 22A	22 X 22	
PWKOL 30A	30 X 30	




KNURLED POLISHED BRASS punched thermo packed bar length 2,7 lm - pack. 15 Pcs - 40,5 lm

Article	HxLmm	
PWKOL 22F	22 X 22	
PWKOL 30F	30 X 30	

KNURLED POLISHED BRASS without holes thermo packed bar length 2,7 lm - pack. 15 Pcs - 40,5 lm

Article	HxLmm	
PWKOL 22	22 X 22	
PWKOL 30	30 X 30	

KNURLED POLI. BRASS punched with screws and screw anchors thermo packed - bar length 0,90 lm - pack. 20 Pcs H x L mm **PWKOL 309FS** 30 X 30

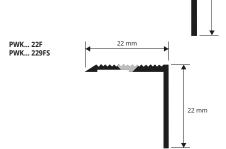

COLOURS



PWKOL 229AS

PWKOL 309AS



KNURLED POLISHED BRASS with adhesive


thermo packed - bar length 0,90 lm - pack. 20 Pcs

 $H \times L mm$

22 X 22

30 X 30



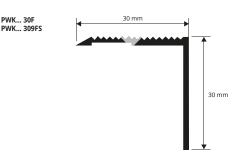

KNURLED ANODIZED ALUMINIUM with adhesive thermo packed

Dar length 2,7 iiii - pack. 20 PtS - 34 iiii				
Article	H x L mm			
PWK 22A	22 X 22			
PWK 30A	30 X 30			



KNURLED ANODIZED ALUMINIUM punched thermo packed bar length 2,7 lm - pack. 20 Pcs - 54 lm

Article	H x L mm	
PWK 22F	22 X 22	
PWK 30F	30 X 30	


KNURLED ANODIZED ALUM. WITHOUT HOLES thermo packed bar length 2,7 lm - pack. 20 Pcs - 54 lm

Article	H x L mm	
PWK 22	22 X 22	
PWK 30	30 X 30	

KNURLED ANOD. ALU. punched with screws and screw anchors

Article	HxLmm	
PWK 229FS	22 X 22	
PWK 309FS	30 X 30	

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

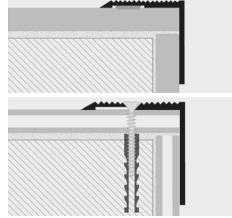

Adhesive version

- Choose the suitable profile and cut it to the necessary length.
 Degrease, wash and clean the solid surface thoroughly.
 Remove the protective paper from the adhesive.
 Lay the profile
- by applying pressure evenly over the whole surface without using

Punched version

1. Choose the suitable profile and cut it to the necessary length.
2. Mark the position of the holes using the existing holes in the profile as reference. 3. Insert the screw anchors into the drilled holes. 4. Fix the profile using flathead screws suitable for the relative slots in the profile.

KNURLED ANODIZED ALUMINIUM with adhesive

thermo packed - bar length		PACK		
Article	HxLmm			
PWK 229AS	22 X 22			
PWK 309AS	30 X 30			*

Available in the colours: AO - AA - AB (AT, CH and SB available on demand with a minimum quantity order of 100 pcs) The code of the selected colour must be added to the article code. E.g.: PWK... 22A (chosen colour anodized gold) PWKAO 22A.

COLOURS



ON DEMAND MINIMUM QUANTITY 100 PCS for color and height

