PROEND GRIP

SILVER, GOLD AND BRONZE ANOD. ALUMINIUM + NON-SLIP INSERT ADHESIVE AND PUNCHED



ANODIZED SILVER, GOLD AND BRONZE ALUM. with adhesive thermo packed - bar length 2,7 Im - pack. 20 Pcs - 54 Im

Article	H x L mm		
PEGR 5230A	30 X 52		



ANODIZED SILVER, GOLD AND BRONZE ALUM. punched thermo packed - bar length 2,7 lm - pack. 20 Pcs - 54 lm

Article	HxLmm
PEGR 5230F	30 X 52

On demand bar length 3 lm with minimum quantity of 200 pcs. Production delay 4/5 weeks. Price to be agreed.

ANODIZED SILVER, GOLD AND BRONZE ALUM.
with adhesive - thermo packed
bar length 1,66 lm - pack. 20 Pcs

bar length 1,66 lm - pack. 20 Pcs		 PACK		
	Article	HxLmm		
Ī	PEGR 523016AS	30 X 52		*

ANODIZED SILVER, GOLD AND BRONZE ALUM. punched, screws and screw anchors - thermo packed bar length 1,66 lm - Pack 20 Pcs

Article H x L n

PEGR 523016FS	30 X 52

Available in the finishes: AA - AO - AB.


The code of the selected finish must be added to the article code. E.g.: PEGR... 523016AS (chosen finish anodized silver) PEGRAA 523016AS.

The adhesive carborundum strip (PROGRIP) is not included with the profile. For PEGR... 5230... order PGR... 20 (Specify the chosen colour).

AO - Anodized gold alum. AA - Anodized silver alum. AB - Anodized bronze alum.

★ = Production on demand with minimum quantity of 100 pcs. Production delay 4/5 weeks. Price to be agreed

PROGRIP is a self-adhesive product in carborundum consisting of a plastic film plus abrasive granules with high resistance to wear. It is normally used to guarantee safety on steps in public and private environments, as required by accident-prevention laws. Available in various colours and widths to meet all technical and aesthetic requirements. It is advisable to apply 2 strips on each step, rounding off the ends.

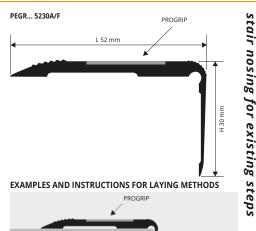

1. Choose the suitable profile for covering the edge of the step.
2. Clean the surface on which the profile is to be laid, ensuring that it is grease-free and dry. Do not apply the strips at temperatures below 15°. 3. Remove the protective paper from the adhesive and lay correctly by applying pressure evenly over the whole profile

lay correctly by applying pressure evenly over the whole profile without using a hammer.


If the punched PROEND GRIP has been chosen, screw the profile to the step and apply the adhesive carborundum to hide the screws.

PROGRIP

ADHESIVE CARBORUNDUM - 6 COLOURS



COLOURS



ADHESIVE CARBORUNDUM NON-SLIP STRIP for STEPS rolls length 18.2 Im

Article	Width mm			
PGRN 20	20			
PGRB 20	20			*
PGRT 20	20			
PGRG 20	20			
PGRY 20	20			
PGRM 20	20			
PGRN 25	25			
PGRB 25	25			*
PGRT 25	25			
PGRG 25	25			
PGRY 25	25			
PGRM 25	25			
PGRN 50	50			
PGRB 50	50			*
PGRT 50	50			
PGRG 50	50			
PGRY 50	50			
PGRM 50	50			

ADHESIVE NON-SLIP STRIP for STEPS - rolls length 18,2 lm

	Article	Width mm	
③	PGRGN 20	20	
①	PGRGN 25	25	
①	PGRGN 50	50	

PGRB... PGRRM... PGRRM...

LAYING INSTRUCTIONS

1. Thoroughly clean and degrease the surface of application. 2. Round the ends of the strips. 3. Remove the protective paper from the adhesive and lay the PROGRIP using a roller. 4. Do not apply the strips at temperatures below 15°, otherwise heat the strips and the step. 5. When necessary clean away impurities with a brush and preserve the PROGRIP. 6. When laying on tiles, cut and round the corners of the strips on the inner part of the tile. 7. Carefully seal the outer edges of the strips to prevent water infiltration.



non-slip strip for steps