



## LVT PROFILES - SOL 30P

AWOODEN FINISHES and ANODIZED FINISHES

*universal joints*

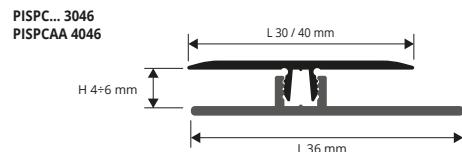

### EXAMPLES OF LAYING

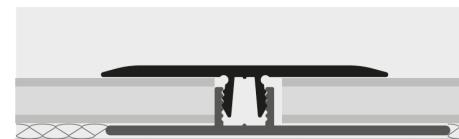

### INSTRUCTIONS FOR LAYING METHODS


1. Choose SOL P / ZERO CURVE / TERMINAL PIN according to the desired finish.
2. Cut the BASE in vinyl resin/PVC to the desired length and fix it with adhesive or dowels to the support.
3. Lay the floor in vinyl, leaving a 5 mm joint between the vertical walls of the base in vinyl resin/PVC and the floor.
4. Cut the desired TOP in aluminium to the desired length.
5. Place a small wooden board on the TOP in aluminium and hammer equally in order to facilitate the insertion of the TOP into the pvc base.



## LVT PROFILES - ZERO CURVE

WOODEN FINISHES and ANODIZED FINISHES

*transition profiles*

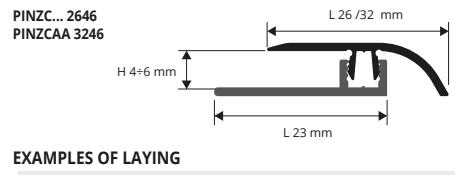

### EXAMPLES OF LAYING




**ALUMINIUM TOP (anod. silver) + BASE (vinyl resin/PVC)**  
thermo packed - bar length 2,7 lm - pack. 20 Pcs - 54 lm

Article	L mm
PINZCAA 3246	32


## LVT PROFILES - TERMINAL PIN

WOODEN FINISHES and ANODIZED FINISHES

*terminal*

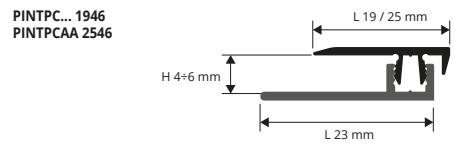

### EXAMPLES OF LAYING

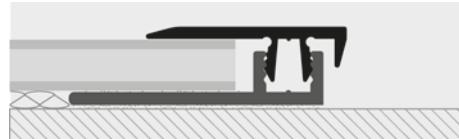


**ALUMINIUM TOP (anod. silver) + BASE (vinyl resin/PVC)**  
thermo packed - bar length 2,7 lm - pack. 20 Pcs - 54 lm

Article	L mm
PINTPCAA 2546	25

### COLOURS



(For a precise assessment of colours request the wooden finishes sample range)

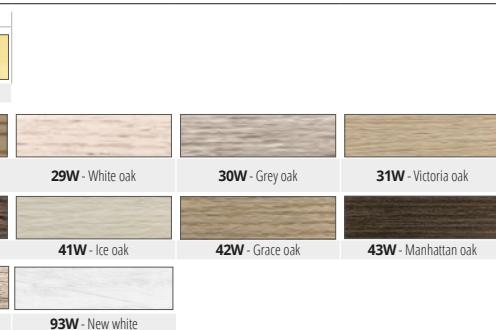

On request it is possible to realize other finishes of the color range: minimum order 200 pcs. Production delay 4/5 weeks. Price to be agreed.  
For sample finishes, contact the sales office for minimum quantities, timing and costs.