
PROSIDE WALK


VARNISHED / COATED ALUMINIUM

PROSIDE WALK is a perimeter profile in varnished aluminium, available in grey and anthracite colour. It is designed to protect the edges of the tiles and the screed on pavements. The profile is equipped with a punched flange that ensures its fixing to the support. The flange is also provided with small holes that allow the momentary fixing of the profile with nails. To reach a right connection between profile and the waterproofing system it's needed to use **PROBAND 150** with **PROBAND KOLL/AB**. The product is also available on request in **BENDABLE VERSION** and with a **SPECIAL SEASIDE PRE-TREATMENT** which increases its resistance to corrosion when installed at sea front environments.

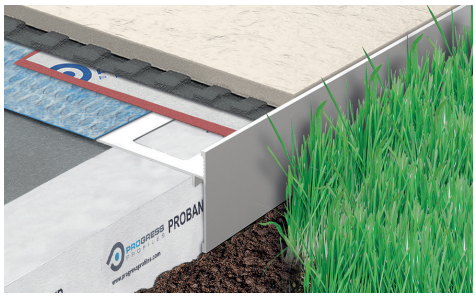



PSDWK 10AL / 125AL / 15AL

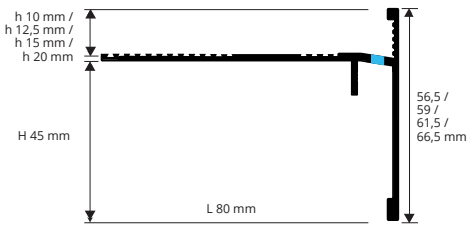

VARNISHED EMBOSSED ALUMINIUM
bar length **2,7 lm** - pack. **20 Pcs - 54 lm**

Article	h mm	H mm	L		
PSDWK 10AL...	10	45	80		
PSDWK 125AL...	12,5	45	80		
PSDWK 15AL...	15	45	80		
PSDWK 20AL...	20	45	80		

EMBOSSED COLOURS

A - Anthracite grey **(no RAL)** | **GF** - Gray **(7038)** | **TF** - Dark brown **(8019)**

BF - White **(9010)**

EMBOSSED COLOURS ON DEMAND

C - Corten | **EF** - Beige **(1019)**


EXTERNAL CORNERS - pack. **10 Pcs**

Article	h mm	H mm	L		
AEPSDWK 10AL.../10	10	45	80		
AEPSDWK 125AL.../10	12,5	45	80		
AEPSDWK 15AL.../10	15	45	80		
AEPSDWK 20AL.../10	20	45	80		

JOINTS - pack. **10 Pcs**

Article		
GINSDWK 10AL.../10		
GINSDWK 125AL.../10		
GINSDWK 15AL.../10		
GINSDWK 20AL.../10		


AEPSDWK external corner (welded)

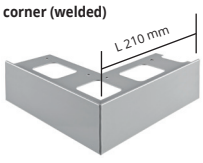

GINSDWK joint



EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

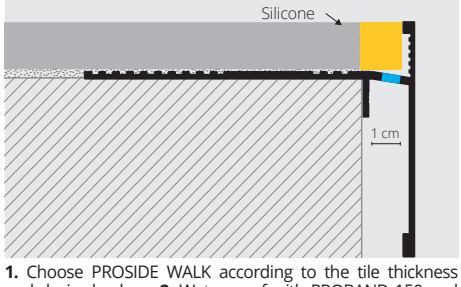

1. Choose PROSIDE WALK according to the tile thickness and desired colour. **2.** Waterproof with PROBAND 150 and PROBAND KOLL the front of the screed. **3.** Fix the external corners with nails. **4.** Cut PROSIDE WALK to the desired length and fix it with nails; connect it with the corners using the junction element. **5.** Lay the tiles, leaving about 5 mm between tiles and profile. **6.** Seal the space between tiles and profile with **PROBAND FIX (PRBFX)**. **PROFILE BENDING: 1)** Cut the anchoring flange into sections and engrave the metal close to the vertical side **2)** bend the profile with the help of a template;

HOW TO REQUEST SEASIDE TREATMENT



*** = Production on demand with minimum quantity of 100 pcs. Production delay 4/5 weeks. Price to be agreed**