PROTERRACE ECO is a natural aluminium edging profile designed to protect the edges of the tiles laid on terraces and balconies. The profile is provided with a punched flange that ensures its fixing to the support. The front side of the profile protects the tile edges and is equipped with grooves that facilitate the grout grip. Thanks to its ease of application PROTERRACE ECO is a much sought after profile. To reach a right connection between profile and the waterproofing system it's needed to use PROBAND 150 with PROBAND KOLL/AB. The product is also available on request in BENDABLE VERSION

PROTERRACE

ALUMINIUM, VARNISHED ALUMINIUM




NATURAL ALUMINIUM thermo packed bar length 2,7 lm - pack. 20 Pcs - 54 lm

	Article	H mm	
②	PTEE 08AN	8	
②	PTEE 10AN	10	
②	PTEE 125AN	12,5	

SILVER ANODIZED ALUMINIUM thermo packed har langth 2 7 lm - nack 20 Pcs - 5/ lm

	bai iciigiii 2,7 iiii - pack. 20	1 (3 - 37 1111	
	Article	H mm	
②	PTEE 08AA	8	
②	PTEE 10AA	10	
③	PTEE 125AA	12,5	

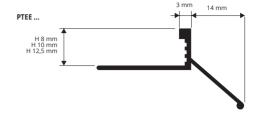


VARNISHED/COATED ALUMINIUM bar length 2,7 lm - pack. 20 Pcs - 54 lm

Article	H mm		
PTEE 08AL	8		
PTEE 10AL	10		
PTEE 125AL	12,5		
	PTEE 08AL PTEE 10AL	PTEE 08AL 8 PTEE 10AL 10	PTEE 08AL 8 PTEE 10AL 10

ARTICLES NOT FOR SALE SINGLY

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS



1. Choose "PROTERRACE ECO" according to the tile thickness. 2. Cut "PROTERRACE ECO" to the desired length and fix it to the support with nails. 3. Apply the desired waterproofing system, sealing the joint between profile and waterproofing.

4. Lay the tiles, leaving about 5 mm between tiles and profile. 5. Seal the space between tiles and profile using **PROBAND FIX (PRBFX). PROFILE BENDING: 1)** Cut the anchoring flange into sections and engrave the metal close to the vertical side **2)** bend the profile with the help of a template;

The code of the selected colour must be added to the article code. E.g.: PTEE 10AL... (grey) PTEE 10ALGF



BF - White (9010) GF - Grey (7038)

COLOURS ON DEMAND



EMBOSSED COLOURS

PROSIDE WALK is a perimeter profile in varnished aluminium, available in grey and anthracite colour. It is designed to protect the edges of the tiles and the screed on pavements. The profile is equipped with a punched flange that ensures its fixing to the support. The flange is also provided with small holes that allow the momentary fixing of the profile with nails. To reach a right connection between profile and the waterproofing system it's needed to use **PROBAND 150** with PROBAND KOLL/AB. The product is also available on request in **BENDABLE VERSION** and with a **SPECIAL SEASIDE PRE-TREATMENT** which increases its resistance to corrosion when installed at sea front environments.

PROSIDE WALK

VARNISHED/COATED ALUMINIUM



VARNISHED EMBOSSED ALUMINIUM

bar length **2,7 lm** - pack. **5 Pcs - 13,5 lm** (PSDWK 10AL...**10 Pcs - 27 lm**)

Article	h mm	H mm	L	
PSDWK 10AL	10	45	80	
PSDWK 125AL	12,5	45	80	
PSDWK 15AL	15	45	80	
PSDWK 20AL	20	45	80	

EMBOSSED COLOURS

A - Anthracite grey (no RAL)	GF - Gray (7038)	TF - Dark brown (8019)

EMBOSSED COLOURS ON DEMAND





EXTERNAL CORNERS - pack. 10 Pcs

Article	h mm	H mm	L	
AEPSDWK 10AL/10	10	45	80	
AEPSDWK 125AL/10	12,5	45	80	
AEPSDWK 15AL/10	15	45	80	
AEPSDWK 20AL/10	20	45	80	

JOINTS -	nack.	10	Pcs
,	puci.		

Article	H mm	
GINSDWKAL/10	10/125/15/20	

Choose the desired height and finish. E.g.: 10 mm joint with finish A - **GINSDWK 10ALA/10**

AEPSDWK external





EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS



 Choose PROSIDE WALK according to the tile thickness and desired colour.
 Waterproof with PROBAND 150 and PROBAND KOLL the front of the screed.
 Fix the external corners with nails.
 Cut PROSIDE WALK to the desired length and fix it with nails; connect it with the corners using the junction element. **5.** Lay the tiles, leaving about 5 mm between tiles and profile. **6.** Seal the space between tiles and profile with PROBAND FIX (P.186). PROFILE BENDING: 1) Cut the anchoring flange into sections and engrave the metal close to the vertical side 2) bend the profile with the help of a template;

HOW TO REQUEST SEASIDE TREATMENT

When placing your order please add S to the article's number Example: PSDWK 10ALGF (seaside) = **PSDWK 10ALGFS**



