

It is a system composed of a special TOP with adhesive, with a visible surface of 44.7 mm, anodized aluminium or covered with wooden film. The aluminium TOP can be fixed to the floor in different ways: with adhesive, with nylon anchors, support with removable spacers, flatten down base.

PROMULTIFIX SYSTEM

ALUMINIUM PROFILES
FIXING KIT









TOP IN ANOD. ALUMINIUM with adhesive (6 finishes of which 3 on demand) n.3 KIT (15 screws, 12 perimeter pins, 6 joints) thermo packed - bar length **2,7 lm** - pack. **20 Pcs** - **54 lm**

Article	L mm
PMPFX... 42A	44,7

TOP IN ALUM. COVERED with adhesive (80 wooden finishes of which 59 on demand) + n.3 KIT (15 screws, 12 perimeter pins, 6 joints) thermo packed - bar length **2,7 lm** - pack. **20 Pcs** - **54 lm**

Article	L mm
PMPFX... 42A	44,7

TOP IN ANOD. ALUMINIUM with adhesive (6 finishes of which 3 on demand) + n.1 KIT (5 screws, 4 perimeter pins, 2 joints) thermo packed0,90 lm 15 Pcs


Article	L mm
PMPFX... 42090AS	44,7

TOP IN ALUM. COVERED with adhesive (80 wooden finishes of which 59 on demand) + n.1 KIT (5 screws, 4 perimeter pins, 2 joints) thermo packed - bar length **0,90 lm** - **15 Pcs**


Article	L mm
PMPFX... 42090AS	44,7

Available in the colours: AO - AA - AB (AT, CH and SB on demand with a minimum quantity order of 200 pcs) and in the wooden finishes: 05W - 07W - 09W -18W - 21W - 29W - 30W - 31W - 32W - 34W - 35W - 37W - 41W - 42W - 44W - 46W - 48W - 49W - 65W - 73W - 75W - 93W. The code of the selected colour must be added to the article code. E.g.: PMPFX... 42A (chosen finish anod. gold) PMPFXAO 42A.


PMPFX... 42090AS / 42A

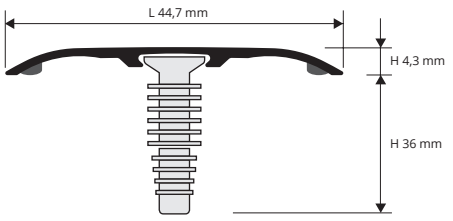

PMPFX... 42090AS / 42A

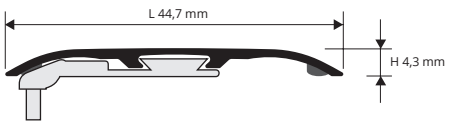

PMPFX... 42090AS / 42A + PMFIXBSAN 23

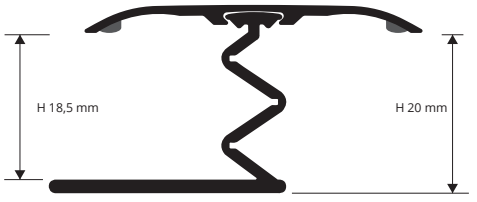


MAXIMUM HEIGHT 18,5 MM




MINIMUM HEIGHT 4,5 MM

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

1. Choose the profile of the required finish, if necessary cut the TOP in the required length.
2. Clean, remove the grease and dry the substrate: the temperature should be at least of 15° C.
Fixing with biadhesive tape:
3. Remove the paper protection from the adhesive and lay the TOP with a vertical pressure without moving the profile.
Fixing with screw anchors:
3. Drill the substrate with a 6 mm bit, 5 holes per linear meter. **4.** Remove the paper protection from the adhesive. **5.** Insert the screw anchors in the profile dovetail groove. **6.** Beat with a rubber/pvc hammer to insert the screw anchors into the holes.
Fixing of the aluminium flatten down base:
3. Cut the flatten down base to the requested length. **4.** Remove the paper protection from the adhesive. **5.** insert the base into the profile groove dovetail, then fix or glue the base to the floor. **6.** Make a uniform pressure on the profile with the hands or a rubber hammer.
Perimetric laying:
3. Remove the paper protection from the adhesive. **4.** Cut the perimetric pins according to the thckness of the floor. **5.** Insert the perimetric pins into the profile groove dovetail using 4 supports per linear meter. **6.** Fix the profil making a uniform pressure on the profile with the hands, but do not move the profile.

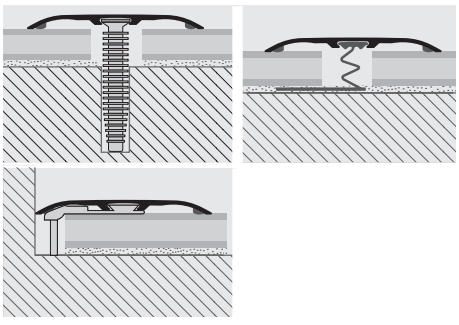


One fixing kit is composed of: 5 screws, 4 perimetric pins, 2 joints



SCREWS AND SCREW ANCHORS, TAP-DOWN BASE

NICKEL - PLATED FLATHEAD SCREWS + SCREW ANCHORS
pack. **1.000 Pcs**

Article	Ø mm	L mm
VINIPT 325	3	25

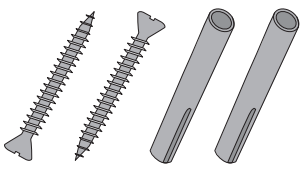

PROFIXER TAP-DOWN BASE - ALUM. PUNCHED/PERFORED
2,7 lm20 Pcs 54 lm

Article	H mm
PMFIXBSAN 23	23

