
# **PROSLIDER**

POLISHED AND SATIN FINISH STAINLESS STEEL AISI 304/1.4301-V2A

PROSLIDER is a sloping terminal transition profile in stainless steel AISI 304/1.4301-V2A designed to join different height floors in a perfect, stepless way. This particularly sturdy profile with the bent base sloping inwards withstands and supports high loads and frequent passage of manual trolleys and vehicles in addition to protecting the edge of the higher floor. **PROSLIDER** is used in particular to join tile or wood to an existing floor. Available in AISI 304/1.4301-V2A stainless steel in various heights to accommodate all differences in level.

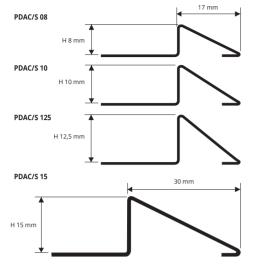



POLISHED STAINLESS ST. AISI 304/1.4301-V2A with protective film bar length 2,7 lm - pack. 20 Pcs - 54 lm - 10/10 mm


	Article	H mm	
	PDAC 08	8	
	PDAC 10	10	
	PDAC 125	12,5	
	PDAC 15	15	
<b>③</b>	PDAC 20	20	



SATIN FINISH STAINLESS ST. AISI 304/1.4301-V2A with protective film bar length 2,7 lm - pack. 20 Pcs - 54 lm - 10/10 mm

	Article	H mm	
	PDACS 08	8	
	PDACS 10	10	
	PDACS 125	12,5	
	PDACS 15	15	
•	PDACS 20	20	

#### SUITABLE FOR USE IN CONTACT WITH FOODSTUFFS.

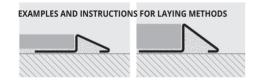

1. Choose the profile with the required height and finish. 2. Fill the profile cavity with adhesive and apply the adhesive onto the area of application. **3.** Lay the "PROSLIDER". **4.** Align it "flush" with the floor/covering. 5. Use the adhesive to seal any empty interstices.


### COLOURS


AC - Polished stainless steel	ACS - Satin finish stainless steel
AISI 304/1.4301-V2A	AISI 304/1.4301-V2A


## **PROSLIDER**

POLISHED AND NATURAL BRASS

**PROSLIDER** is a sloping terminal transition profile designed to join different height floors in a perfect, stepless way. This particularly sturdy profile withstands and supports high loads and frequent passage of manual trolleys and vehicles in addition to protecting the edge of the higher floor. **PROSLIDER** is used in particular to join tile or wood to an existing floor. Available in natural and polished brass in various heights to accommodate all differences in level.

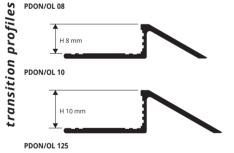

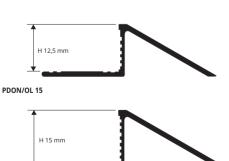

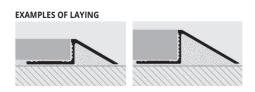



NATURAL BRASS thermo packed 5 Pcs bar length 2,7 lm - pack. 20 Pcs - 54 lm

Article	H mm		
PDON 08	8		1
PDON 10	10		
PDON 125	12,5		
PDON 15	15		1

### INSTRUCTIONS FOR LAYING

INSTRUCTIONS FOR LAYING

1. Choose the profile with the required height H, material and finish.

2. Fill the profile cavity with adhesive and apply the adhesive onto the area of application. 3. Lay the "PROSLIDER". 4. Align it "flush" with the floor/covering. 5. Use the adhesive to seal any empty interstices. Oxidation marks on profiles in natural and polished brass may be easily removed by polishing the profiles with specific products to be found on sale such as Sidol, Smac and similar.



POLISHED BRASS thermo packed bar length 2,7 lm - pack. 20 Pcs - 54 lm

Article	H mm		
PDOL 08	8		*
PDOL 10	10		
PDOL 125	12,5		*
PDOL 15	15		*

### **COLOURS**

ON - Natural brass	OL - Polished brass

