
PROCARPET ALL

NATURAL AND ANODISED SILVER ALUMINIUM

PROCARPET ALL is a profile in aluminium (natural or silver anodised) used for joining two floors of differing thickness and in particular for joining a tiled or parquet floor to wall-to-wall carpeting, making a perfect join thanks to the vertical part of less than 4 mm. In addition to completely protecting the edge of the higher floor, this particularly sturdy profile withstands high loads and supports the frequent passage of manual trolleys, vehicles and intense pedestrian traffic.

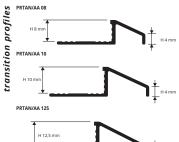





NATURAL ALUMINIUM thermo packed 5 Pcs har length 2 70 lm - nack 20 Pcs - 54 lm

our icingui 2,70 iiii	pack. 20 1 C3	J4 IIII	
Article	Hn	nm	

Article	H mm	
PRTAN 08	8	
PRTAN 10	10	
PRTAN 125	12,5	

ANODISED SILVER ALUMINIUM thermo packed har length 2.70 lm - pack. 20 Pcs - 54 lm

Article	H mm	
PRTAA 08	8	
PRTAA 10	10	
PRTAA 125	12,5	

EXEMPLES OF LAYING




INSTRUCTIONS FOR LAYING
1. Choose the "PROCARPET ALL" taking into consideration the exact height of the floor. 2 Using a notched spreader apply the adhesive onto the area of application of the profile. 3. Ley and align the profile, cut to the necessary length, pressing the perforated flange into the adhesive. 4. Ley the tiles, aligning them so that the top edge of the profile is "flush" with the tile. 5. Fill the profilerible area. of contact with adhesive to prevent the accumulation of water in

COLOURS



PROSKID


POLISHED BRASS AND ANODISED SILVER ALUMINIUM PROSKID is a sloping profile ideal for the stepless joining of two existing floors of differing heights where no transition profile was installed at the time of laying. Silicone is used for the laying. The notching on the profile helps anchorage of the silicone or adhesive. Hardwearing and attractive.

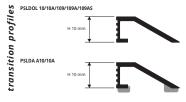





EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

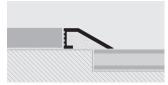

1. Choose the "PROCARPE" taking into consideration the exact height of the floor. 2. Using a notched spreader apply the adhesive not the area of application of the profile 3. Liy and align the profile, cut to the necessary length, pressing the perforated flange into the adhesive. 4. Lay the tiles, aligning them so that the top edge of the profile is "flush" with the tile. 5. fill the profile rise are of contact with adhesive to present the accumulation of water in any voids.

POLISHED BRASS thermo packed

bar length 2,70 lm - pack. 20 Pcs - 54 lm				
Article	H mm			
PSLDOL 10	10			*
PSLDOL 10A (with adhesive)	10			*
POLISHED BRASS thermo pac bar length 0.90 lm - pack 20 Pcs		F	-	

Article PSLDOL 109AS (with adhesive) ED RDACC thormo nacked

polished BRASS thermo pack par length 0,90 lm - pack. 20 Pcs				
Article	H mm			
PSLDOL 109	10			
DCI DOI 1004 (mish salksasius)	10			

ANODISED SILVER ALUMINIUM thermo packed bar length 2,70 lm - pack. 20 Pcs - 54 lm

H mm		
10		
10		
	10	10

COLOURS



