

# **ZERO CURVE**





## DESCRIPTION

**ZERO CURVE** is a profile that allows to connect a wooden or laminate floor to another one at a different level and that works as an expansion joint. The profile is composed by an aluminum BASE, a rigid impact-resistant vinyl resin insert (PIN) and by an aluminum TOP covered with a vinyl resin film also with wood - effect finishes. Its particular design with several finishes, make it a highly sougth after profile that can be used with any wooden and laminate laid with adhesive or float.

### MATERIAL

**ZERO CURVE** is a profile that allows to connect a wooden or laminate floor to another one at a different level and that works as an expansion joint. The profile is composed by a natural aluminum BASE, 45 mm. width, perfored and punched to ensure its fixing with adhesive or screws, a rigid impact-resistant vinyl resin insert (PIN) 9, 11, 13, 15, 17 and 19 mm. height and by an aluminum TOP. The TOP is available in anodized gold, silver and bronze aluminum or covered with a vinyl resin film with 29 wood - effect finishes; the vinyl resin

film is very resistant to abrasion (AC1 class), UV rays and to commonly used cleaning products. The PIN insert, ZERO CURVE does not require any between the aluminum BASE and TOP, special maintenance; it is suggested is realized in rigid impact-resistant to clean it with normal household vinyl resin to prevent the movement cleaning products. of eletric charges from the screed to the floor. Its particular design with several finishes and the simplicity of installation make ZERO CURVE a highly sougth after profile that can be used with any wooden and laminate laid with adhesive or float.

#### **AREAS OF USE**

ZERO CURVE is suitable as profile that allows to connect a wooden or laminate floor to another one at a different level in residential environments, offices and stores.


#### **AVVERTENZE**

Do not use ZERO CURVE in environments subject to strong mechanical and chemical stress and in environments with high mechanical abrasion.

### MAINTENANCE



# **ZERO CURVE**

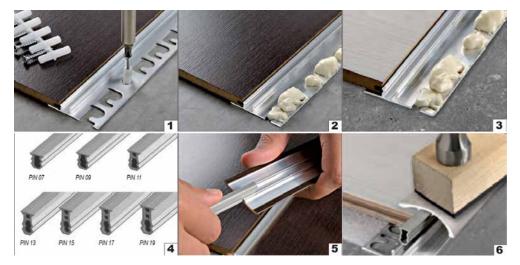

#### LAYING INSTRUCTIONS

1. Choose "**ZERO CURVE**" in the desired finish and according to the thickness of the floor

2. Cut the aluminum BASE at the desired length and fix it with adhesive or screws (1).

3. Lay the wooden floor or laminate making sure to leave a 5 mm. joint between the BASE and the floor (2).

4. Cut the aluminum TOP and the PIN insert at the desired length.

5. Slot the PIN insert in the TOP and place the profile over the "U" shaped channel of the BASE.

6. Using a wooden block and a hammer, apply pressure evenly over the whole length of the profile (3).

## **VOCE DI CAPITOLATO**

Supply and installation of a profile that allows to connect a wooden / laminate floor to another one at a different level and that works as an expansion joint, composed by a natural aluminum BASE, 45 mm. width, perfored and punched to ensure its fixing with adhesive / screws, a rigid impact-resistant vinyl resin insert (PIN) 9 / 11 / 13 / 15 / 17 / 19 mm. height and by an aluminum TOP in anodized gold / silver / bronze aluminum or covered with a vinyl resin film, like ZERO CURVE of the company Progress Profiles.

**PINZC... 07 / 11 / 13 / 15 / 17 / 19**: Aluminum TOP + PIN insert + aluminum BASE

**PINZC... 07S / 11S / 13S / 15S / 17S / 19S**: Aluminum TOP + PIN insert + aluminum BASE self pack

Profile height:	mm
Profile length:	mt
Material:	€/mt
Application: _	€/mt
Total value: _	€/mt

