


# PROKERLAM LINE


POLISHED AND SATIN FINISH STAINLESS STEEL  
AISI 304/1.4301-V2A

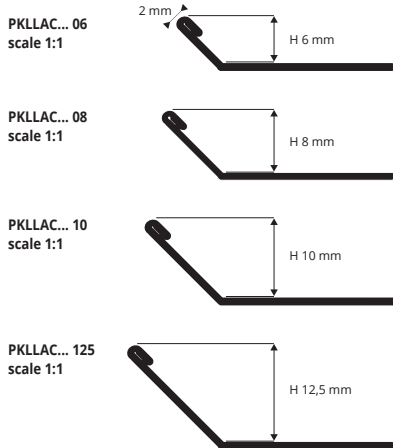

## LAYING INSTRUCTIONS



**PROKERLAM LINE** is a profile in polished and satin finish stainless steel AISI 304/1.4301-V2A suitable to protect the external corners of coverings in low thickness. It can be used like connection profile between step tread and riser of stairs coated with ceramic and mosaic with low thickness. Its particular section and the availability in three different heights and finishes and special pieces such as internal and external corners, end caps and joints make **PROKERLAM LINE** a much sought-after profile that allows a workmanlike application even with low thickness coverings.

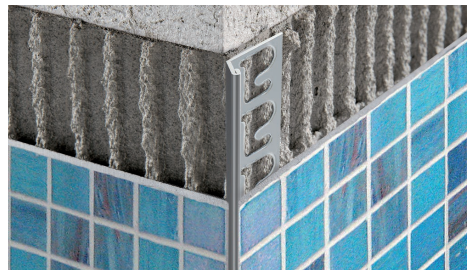

**POLISHED STAINLESS ST. AISI 304/1.4301-V2A with protective film**  
Bar lenght 2,7 lm - Pack 40 PCS - 108 lm

Article	H mm	€/lm	€/Pc
PKLLAC 06	6		
PKLLAC 08	8		
PKLLAC 10	10		
PKLLAC 125	12,5		

1. Choose "PROKERLAM LINE" according to the desired finish.
2. Cut "PROKERLAM LINE" to the desired length and apply the adhesive on the support where the profile will be laid.
3. Press the anchoring flange of "PROKERLAM LINE" into the adhesive.
4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile.
5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.



**SATIN FINISH STAINLESS ST. AISI 304/1.4301-V2A with protective film**  
Bar lenght 2,7 lm - Pack 40 PCS - 108 lm


Article	H mm	€/lm	€/Pc
PKLLACS 06	6		
PKLLACS 08	8		
PKLLACS 10	10		
PKLLACS 125	12,5		

## COLOURS




# PROKERLAM LINE

ANODIZED, VARNISHED AND STONE LINE  
ALUMINIUM

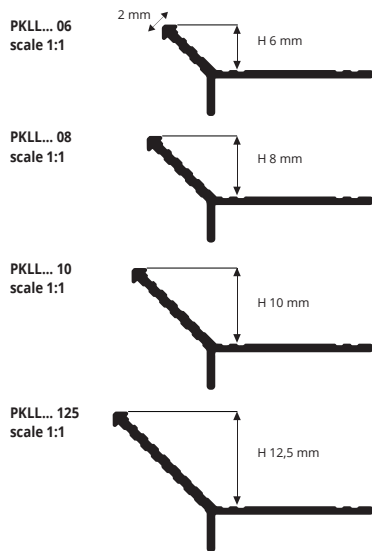

## LAYING INSTRUCTIONS

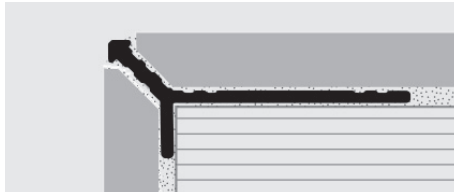

1. Choose "PROKERLAM LINE" according to the desired finish.
2. Cut "PROKERLAM LINE" to the desired length and apply the adhesive on the support where the profile will be laid.
3. Press the anchoring flange of "PROKERLAM LINE" into the adhesive.
4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile.
5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.



**ANODISED SILVER ALUMINIUM thermo packed**  
Bar lenght 2,7 lm - Pack 40 PCS - 108 lm

Article	H mm	€/lm	€/Pc
PKLLAA 06	6		
PKLLAA 08	8		
PKLLAA 10	10		
PKLLAA 125	12,5		

**POLISHED CHROME ALUMINIUM thermo packed**  
Bar lenght 2,7 lm - Pack 40 PCS - 108 lm

Article	H mm	€/lm	€/Pc
PKLLBC 10	10		
PKLLBC 125	125		

## COLOURS

ANODIZED	POLISHED
AA - Anodized Silver Alu.	BC - Polished chrome alu.
VARNISHED	
01 - White Varnished Alu.	11 - Black Varnished Alu.

STONE LINE				
SL02 - Stone cream	SL03 - Stone greywary	SL04 - Stone sand	SL05 - Stone grey	SL08 - Stone antrdark



**VARNISHED ALUMINIUM (White-Black) thermo packed**  
Bar lenght 2,7 lm - Pack 40 PCS - 108 lm

Article	H mm	€/lm	€/Pc
PKLLA 06-01	6		
PKLLA 06-11	6		
PKLLA 08-01	8		
PKLLA 08-11	8		
PKLLA 10-01	10		
PKLLA 10-11	10		
PKLLA 125-01	12,5		
PKLLA 125-11	12,5		

**STONE LINE ALUMINIUM thermo packed**  
Bar lenght 2,7 lm - Pack 40 PCS - 108 lm

Article	H mm	€/lm	€/Pc
PKLLA 06-SL...	6		
PKLLA 08-SL...	8		
PKLLA 10-SL...	10		
PKLLA 125-SL...	12,5		

The code of the selected colour must be added to the article code.  
E.g.: PKLLA 06-... (chosen colour stone cream) PKLLA 06-SL02.