



PROJOLLY

ANODIZED ALUMINIUM
SILVER, COPPER, TITANIUM, GOLD AND BLACK

PROJOLLY is a rounded bead profile in anodized aluminium that can be applied on external corners of coverings. It can be used to close the perimeter of coverings and like a connection profile between step tread and riser of stairs coated with ceramic or natural stone tiles. Its particular section and elegance, the availability in five different finishes and special pieces such as internal and external corners, end caps and joints make **PROJOLLY** a much sought-after and elegant profile that allows a workmanlike application.

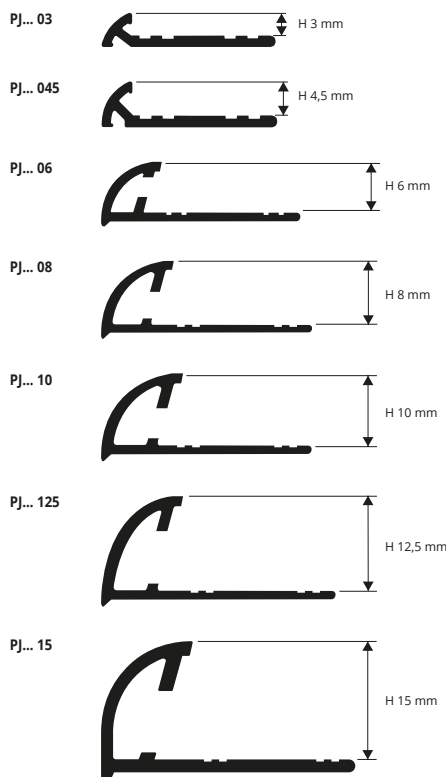

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

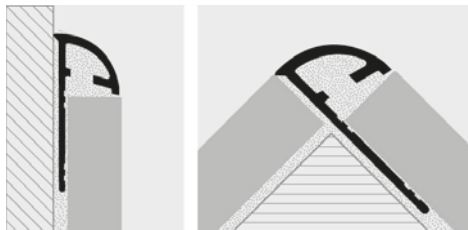

1. Choose "PROJOLLY" according to the tile thickness and desired finish. 2. Cut "PROJOLLY" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.



ANODIZED ALUM. (silver-copper-gold-titanium-black) **thermo packed**
bar length **2,7 lm** - pack. **40 Pcs - 108 lm**
(for **H 15** anodized silver alum. pack. **20 Pcs - 54 lm**)

Article	H mm		
PJAA 03	3		
PJAA 045	4,5		
PJAA 06	6		
PJAA 08	8		
PJAA 10	10		
PJAA 125	12,5		
PJAA 15	15		
PJAO 03	3		
PJAO 045	4,5		
PJAO 06	6		
PJAO 08	8		
PJAO 10	10		
PJAO 125	12,5		
PJAO 15	15		
PJAR 08	8		
PJAR 10	10		
PJAR 125	12,5		
PJAT 08	8		
PJAT 10	10		
PJAT 125	12,5		
PJNE 08	8		
PJNE 10	10		
PJNE 125	12,5		

COLOURS

ANODIZED

AA - Anodized silver alum.	AR - Anodized copper alum.	AT - Anodized titanium alum.	AO - Anodized gold alum.	NE - Anodized black alum.
----------------------------	----------------------------	------------------------------	--------------------------	---------------------------

CAPSULES, END CAPS and THREE-WAYS JOINTS

* Capsules & end caps of the on demand profiles are also on demand

Anodized ALUMINIUM (silver, copper, titanium, gold and black) / PLASTIC

LEFT CAPSULES ANODIZED ALUMINIUM

(silver, copper, titanium and gold)

Article	H mm	Pack 10 Pcs	Pack 2 Pcs
CPJAA .../...	06/08/10/125		
CPJAA 15/...	15		
IPJAA .../...	06/08/10/125		
IPJAA 15/...	15		
TPJAA .../...	06/08/10/125/15		
CPJAO .../...	06/08/10		
CPJAO 15/...	15		
IPJAO .../...	06/08/10		
IPJAO 15/...	15		
TPJAO .../...	06/08/10/15		
CPJAR .../...	08/10/125		
IPJAR .../...	08/10/125		
TPJAR .../...	08/10/125		
CPJAT .../...	08/10/125		
IPJAT .../...	08/10/125		
TPJAT .../...	08/10/125		
CPJNE .../...	08/10/125		
IPJNE .../...	08/10/125		
TPJNE .../...	08/10/125		

Choose the desired pack & height
Ex: 4,5 mm capsule in 10 Pcs Pack - CPJAA 10/10

JOINTS - PLASTIC

Article	H mm	Pack 10 Pcs	Pack 2 Pcs
GIJA .../...	06/08/10/125/15		

Choose the desired pack & height
Ex: 10 mm joint in 10 Pcs Pack - GIJA 10/10

EXTERNAL CAPSULES



INTERNAL CAPSULES



CAPS




JOINTS



The right capsules are available on demand and must be used only in the following cases:


A) when you are laying the cut base of the profile perpendicularly on the floor;

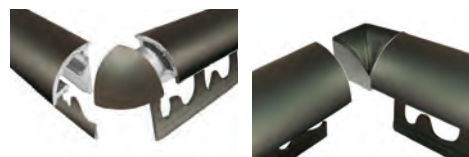

Add "D" to the article code. For example: CPJDAA 06.

Add "D" to the article code. For example: IPJDAA 06.

B) as an alternative to end-caps (right side).

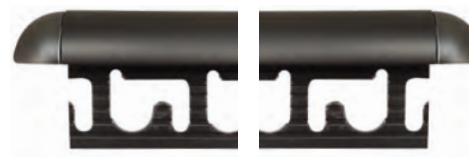

LEFT CAPSULES

RIGHT CAPSULES

Add "D" to the article code. For example: CPJDAA 06.

PROJOLLY is a rounded bead profile in polished aluminium that can be applied on external corners of coverings. It can be used to close the perimeter of coverings and like a connection profile between step tread and riser of stairs coated with ceramic or natural stone tiles. Its particular section and elegance, the availability in five different finishes and special pieces such as internal and external corners, end caps and joints make **PROJOLLY** a much sought-after and elegant profile that allows a workmanlike application.

PROJOLLY


POLISHED ALUMINIUM
CHROME, COPPER, TITANIUM, GOLD AND BLACK



POLISHED ALUMINIUM (chrome-copper-titanium-gold-black)
thermo packed - bar length 2,7 lm - pack. 40 Pcs - 108 lm (H 15 mm - 54 lm)

Article	H mm		
PJBC 03	3		
PJBC 045	4,5		
PJBC 06	6		
PJBC 08	8		
PJBC 10	10		
PJBC 125	12,5		
PJBC 15	15		
PJBO 03	3		
PJBO 045	4,5		
PJBO 06	6		
PJBO 08	8		
PJBO 10	10		
PJBO 125	12,5		
PJBR 08	8		
PJBR 10	10		
PJBR 125	12,5		
PJBT 08	8		
PJBT 10	10		
PJBT 125	12,5		
PJBN 08	8		
PJBN 10	10		
PJBN 125	12,5		

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

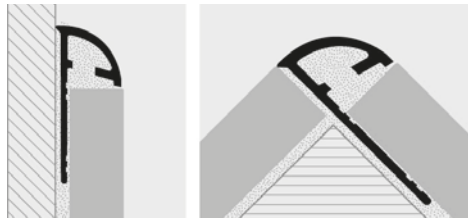

1. Choose "PROJOLLY" according to the tile thickness and desired finish. 2. Cut "PROJOLLY" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

COLOURS

POLISHED				
BC - Polished chrome alum.	BR - Polished copper alum.	BT - Polished titanium alum.	BO - Polished gold alum.	BN - Polished black alum.

PJ... 03		H 3 mm
PJ... 045		H 4,5 mm
PJ... 06		H 6 mm
PJ... 08		H 8 mm
PJ... 10		H 10 mm
PJ... 125		H 12,5 mm
PJBC 15		H 15 mm

CAPSULES, END CAPS and THREE-WAYS JOINTS


POLISHED ALUMINIUM (chrome, copper, titanium, gold, black) / PLASTIC

Capsules & end caps of the on demand profiles are also on demand *

JOINTS - PLASTIC

Article	H mm	Pack 10 Pcs	Pack 2 Pcs
GJJA .../...	06/08/10/125/15		

Choose the desired pack & height
Ex.: 10 mm joint in 10 Pcs Pack - GJJA 10/10

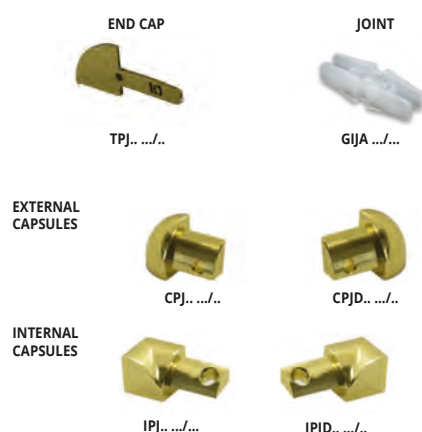


LEFT CAPSULES POLISHED ALUMINIUM chrome, copper, titanium and gold

Article	H mm	Pack 10 Pcs	Pack 2 Pcs
CPJBC .../...	06/08/10/125		
CPJBC 15/...	15		
IPJBC .../...	06/08/10/125		
IPJBC 15/...	15		
TPJBC .../...	06/08/10/125/15		
CPJBO .../...	06/08/10/125		
IPJBO .../...	06/08/10/125		
TPJBO .../...	06/08/10/15		
CPJBR .../...	08/10/125		
IPJBR .../...	08/10/125		
TPJBR .../...	08/10/125		
CPJBT .../...	08/10/125		
IPJBT .../...	08/10/125		
TPJBT .../...	08/10/125		
CPJBN .../...	08/10/125		
IPJBN .../...	08/10/125		
TPJBN .../...	08/10/125		

Choose the desired pack & height
Ex.: 4,5 mm capsule in 10 Pcs Pack - CPJBC 10/10

(*) 12,5/15 mm NOT SUITABLE FOR THREE-WAYS CORNER

The right capsules are available on demand and must be used only in the following cases:
A) when you are laying the cut base of the profile perpendicularly on the floor;

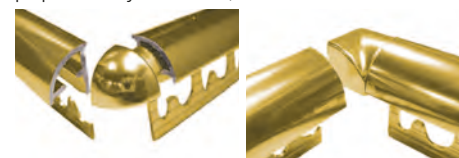

Add "D" to the article code. For example: CPJDBC 06. Add "D" to the article code. For example: IPJDBC 06.

B) as an alternative to end-caps (right side).




LEFT CAPSULES
Add "D" to the article code. For example: CPJDBC 06.


PROJOLLY

BRUSHED ALUMINIUM

PROJOLLY is a rounded bead profile in brushed aluminium that can be applied on external corners of coverings. It can be used to close the perimeter of coverings and like a connection profile between step tread and riser of stairs coated with ceramic or natural stone tiles. Its particular section and elegance, the availability in four different finishes and special pieces such as internal and external corners, end caps and joints make **PROJOLLY** a much sought-after and elegant profile that allows a workmanlike application.

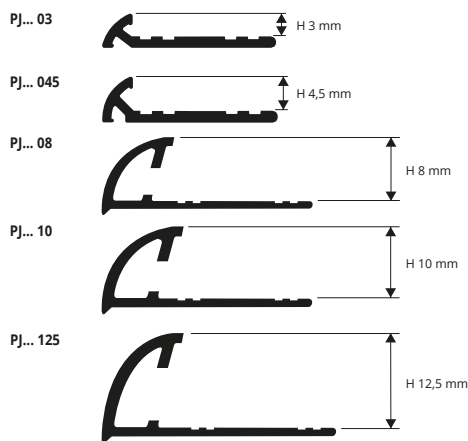

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

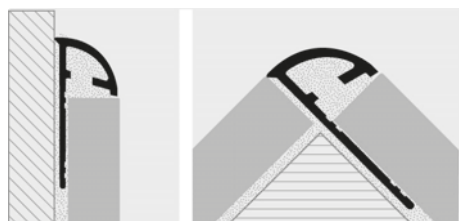

1. Choose "PROJOLLY" according to the tile thickness and desired finish. 2. Cut "PROJOLLY" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.



BRUSHED POLISHED ALUMINIUM (silver-gold-copper-titanium-black)
thermo packed - bar length 2,7 lm - pack. 40 Pcs - 108 lm

Article	H mm		
PJBS 03	3		
PJBS 045	4,5		
PJBS 08	8		
PJBS 10	10		
PJBS 125	12,5		
PJRS 03	3		
PJRS 045	4,5		
PJRS 08	8		
PJRS 10	10		
PJRS 125	12,5		
PJBOS 03	3		
PJBOS 045	4,5		
PJBOS 08	8		
PJBOS 10	10		
PJBOS 125	12,5		
PJTS 03	3		
PJTS 045	4,5		
PJTS 08	8		
PJTS 10	10		
PJTS 125	12,5		
PJNS 08	8		
PJNS 10	10		
PJNS 125	12,5		



COLOURS

BRUSHED POLISHED		
BS - Brushed polished silver alum. RS - Brushed polished copper alum. TS - Brushed polished titanium alum.		
NS - Brushed polished black alum.		

AVAILABLE MINIMUM QUANTITY 100 PCS by colour and height

BRUSHED POLISHED
BOS - Brushed gold alum.

(Price to be agreed. Production delay 4/5 weeks)

CAPSULES, END CAPS and THREE-WAYS JOINTS

* Capsules & end caps of the on demand profiles are also on demand

BRUSHED POLISHED ALUMINIUM (silver, copper, titanium, black) / PLASTIC

LEFT CAPSULES - BRUSHED POLISHED ALUMINIUM

silver-gold-copper-titanium-black

Article	H mm	Pack 10 Pcs	Pack 2 Pcs
CPJBS .../...	08/10/125		
IPJBS .../...	08/10/125		
TPJBS .../...	08/10/125		
CPJBOS .../...	08/10/125		
IPJBOS .../...	08/10/125		
TPJBOS .../...	08/10/125		
CPJRS .../...	08/10/125		
IPJRS .../...	08/10/125		
TPJRS .../...	08/10/125		
CPJTS .../...	08/10/125		
IPJTS .../...	08/10/125		
TPJTS .../...	08/10/125		
CPJNS .../...	08/10/125		
IPJNS .../...	08/10/125		
TPJNS .../...	08/10/125		

Choose the desired pack & height
Ex: 4,5 mm capsule in 10 Pcs Pack - CPJBS 10/10

JOINTS - PLASTIC

Article	H mm	Pack 10 Pcs	Pack 2 Pcs
GIJA .../...	08/10/125		

Choose the desired pack & height
Ex: 10 mm joint in 10 Pcs Pack - GIJA 10/10

EXTERNAL CAPSULES



CPJ... .../...



CPJD... .../...

INTERNAL CAPSULES



IPJ... .../...



IPJD... .../...

The right capsules are available on demand and must be used only in the following cases:

A) when you are laying the cut base of the profile perpendicularly on the floor;



Add "D" to the article code. For example: CPJDBS 08.



Add "D" to the article code. For example: IPJDBS 08.

B) as an alternative to end-caps (right side).



LEFT CAPSULES

Add "D" to the article code. For example: CPJDBS 08.

RIGHT CAPSULES

END CAP



TPJ... .../...

JOINT



GIJA .../...

PROJOLLY is a rounded bead profile in varnished aluminium that can be applied on external corners of coverings. It can be used to close the perimeter of coverings. Its particular section and elegance, the availability in five different colours and special pieces such as internal and external corners, end caps and joints make **PROJOLLY** a much sought-after and elegant profile that allows a workmanlike application.

PROJOLLY

VARNISHED ALUMINIUM



VARNISHED ALUMINIUM (HOT-WORKED 200°) thermo packed
bar length 2,7 lm - pack. 20 Pcs-54 lm (colour white 40 Pcs - 108 lm)

Article	H mm		
PJA 06-01	6		
PJA 08-...	8		
PJA 10-...	10		
PJA 125-01	12,5		

With H 8 and 10 mm available in the colours: 01 - 0106 - 0311 - 06 - 11
Available on demand: 010 - 02-03-0211-10-17.
The code of the selected colour must be added to the article code.
E.g.: PJA 08... (chosen colour white) PJA 08-01.

COLOURS


01 - Varnished white alum. (9016)	0106 - Varnished white ivory alum. (9001)	0311 - Varnished asphalt grey alum. (7043)
06 - Varnished ivory alum. (1015)	11 - Varnished black alum. (9005)	



On demand may be realised in other finishes of the colour chart. Contact our customer service for minimal quantity, timing and price.

AVAILABLE MINIMUM QUANTITY 100 PCS by colour and height
(Price to be agreed. Production delay 4/5 weeks)

010 - Varnished white matt alum. (9016)	02 - Varnished light grey alum. (7035)	03 - Varnished stone grey alum. (7030)
0211 - Varnished quartz grey alum. (7039)	10 - Varnished klinker red alum. (8004)	17 - Varnished bahama beige alum.

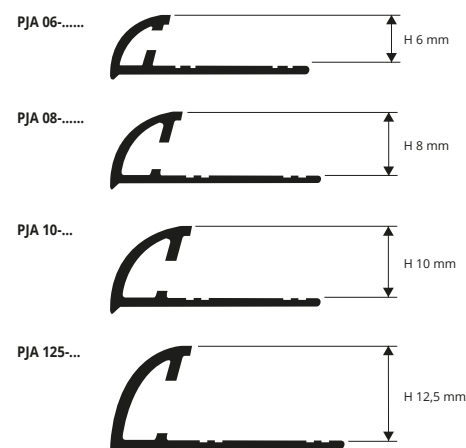

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS



1. Choose "PROJOLLY" according to the tile thickness and desired colour. 2. Cut "PROJOLLY" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

CAPSULES, END CAPS and THREE-WAYS JOINTS

VARNISHED ALUMINIUM / PLASTIC

Capsules & end caps of the on demand profiles are also on demand

LEFT CAPSULES VARNISHED ALUMINIUM (HOT-WORKED 200°)

Article	H mm	Pack 10 Pcs	Pack 2 Pcs
CPJA ...-.../...	08/10/125		
IPJA ...-.../...	08/10/125		
TPJA ...-.../...	08/10/125		

Choose the desired pack. & height
Ex.: 4,5 mm capsule in 10 Pcs Pack - CPJA 10-06/10 10/10

EXTERNAL CAPSULES



INTERNAL CAPSULES



JOINTS - PLASTIC

Article	H mm	Pack 10 Pcs	Pack 2 Pcs
GIJA .../...	08/10/125		

Choose the desired pack. & height
Ex.: 10 mm joint in 10 Pcs Pack - GIJA 10/10

END CAP




JOINT



The right capsules are available on demand and must be used only in the following cases:

A) when you are laying the cut base of the profile perpendicularly on the floor;

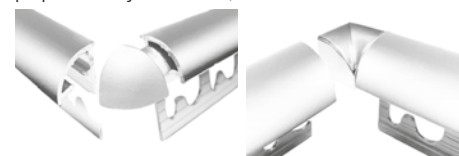

Add "D" to the article code. For example: CPJDA 06-01. Add "D" to the article code. For example: IPJDA 06-01.

B) as an alternative to end-caps (right side).



LEFT CAPSULES

RIGHT CAPSULES

Add "D" to the article code. For example: CPJDA 06-01.