
PROJOLLY TRIANGLE

POLISHED, SUPER POLISHED AND SATIN FINISH STAINLESS STEEL AISI 304/1.4301-V2A

PROJOLLY TRIANGLE is a triangle-shaped bead profile polished, super polished and satin finish stainless steel AISI 304/1.4301-V2A that can be applied on external corners of coverings. It can be used to close the perimeter of coverings and like a connection profile between step tread and riser of stairs coated with ceramic or natural stone tiles. Its particular section, the availability in three different finishes and special pieces such as internal and external corners, end caps and joints make PROJOLLY TRIANGLE a much sought-after profile that allows a workmanlike application even in environments subject to high mechanical stresses.





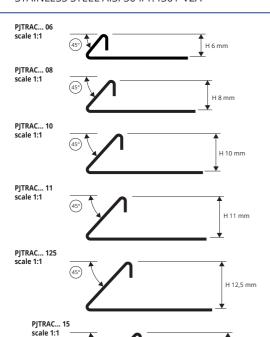

POLISHED STAINLESS STEEL AISI 304/1.4301-V2A with protective film bar length 2,7 lm - pack. 20 Pcs - 54 lm - 8/10 mm

Article	H mm	€/lm	€/Pc
PJTRAC 06	6		
PJTRAC 08	8		
PJTRAC 10	10		
PJTRAC 11	11		
PJTRAC 125	12,5		
PJTRAC 15	15		

SATIN FINISH STAINLESS STEEL AISI 304/1.4301-V2A bar length 2,7 lm - pack. 20 Pcs - 54 lm - 8/10 mm

Article H mm €/lm €/Pc	but length 2,7 iiii pack. 20 i C3	J-11111 07	10 111111		
DITDACCOC	Article	H mm	€/lm	€/Pc	
PJIRACS 00 6	PJTRACS 06	6			
PJTRACS 08 8	PJTRACS 08	8			
PJTRACS 10 10	PJTRACS 10	10			
PJTRACS 11 11	PJTRACS 11	11			
PJTRACS 125 12,5	PJTRACS 125	12,5			
PJTRACS 15 15	PJTRACS 15	15			

SUPER POLISHED STAINLESS STEEL AISI 304/1.4301-V2A thermo packed

bar length 2.7 lm - pack. 20 Pcs - 54 lm - 8/10 mm

bar iciigai =// iiii pacia =0 1 00			
Article	H mm	€/lm	€/Pc
PJTRACML 06	6		
PJTRACML 08	8		
PJTRACML 10	10		
PJTRACML 11	11		
PJTRACML 125	12,5		
PJTRACML 15	15		

COLOURS

AC - Polished stainless steel	ACML - Super polished stainless	ACS - Satin finish stainless stee
AISI 304/1.4301-V2A	steel AISI 304/1.4301-V2A	AISI 304/1.4301-V2A

SUITABLE FOR USE IN CONTACT WITH FOODSTUFFS.

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS



1. Choose "PROJOLLY TRIANGLE" according to the tile thickness and desired finish. 2. Cut "PROJOLLY TRIANGLE" to the desired length and apply the adhesive on the support where the profile will be laid. **3.** Press the anchoring flange of "PROJOLLY TRIANGLE" into the adhesive. **4.** Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. **5.** Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

CAPSULES, END CAPS, THREE-WAYS JOINTS and JOINTS

POLISHED, SUPER POLISHED AND SATIN FINISH STAINLESS STEEL AISI 304/1.4301-V2A / PLASTIC

EXTERNAL / INTERNAL / THREE-WAYS CAPSULES and END CAPS - POLISHED STAINLESS STEEL

Article	H mm	€/Pack. 10 pcs	€/Pack. 2 pcs
CPJTRAC/	06-08-10-11-12,5-15		
IPJTRAC/	06-08-10-11-12,5-15		
CTPJTRAC/	06-08-10-11-12,5-15		
TPJTRAC/	06-08-10-11-12,5-15		

Choose the desired packaging: E.g.: CPJTRAC-.../10 (Pack. 10 Pcs) CPJTRAC-.../2 (Pack. 2 Pcs)

ARTICLES NOT FOR SALE SINGLY

EXTERNAL / INTERNAL / THREE-WAYS CAPSULES and END CAPS - SUPER POLISHED STAINLESS STEEL

Article	H mm	€/Pack. 10 pcs	€/Pack. 2 pcs
CPJTRACML/	06-08-10-11-12,5-15		
IPJTRACML/	06-08-10-11-12,5-15		
CTPJTRACML/	06-08-10-11-12,5-15		
TPJTRACML/	06-08-10-11-12,5-15		

Choose the desired packaging: E.g.: CPJTRACML -.../10 (Pack. 10 Pcs) CPITRACML -.../2 (Pack. 2 Pcs)

ARTICLES NOT FOR SALE SINGLY

EXTERNAL / INTERNAL / THREE-WAYS CAPSULES AND and CAPS - SATIN FINISH STAINLESS STEEL

Article	H mm	€/Pack. 10 pcs	€/Pack. 2 pcs
CPJTRACS/	06-08-10-11-12,5-15		
IPJTRACS/	06-08-10-11-12,5-15		
CTPJTRACS/	06-08-10-11-12,5-15		
TPJTRACS/	06-08-10-11-12,5-15		
CL L. L. L. E. CDITDLCC (40 /D L 40 D)			

Choose the desired packaging: E.g.: CPJTRACS-.../10 (Pack. 10 Pcs) CPJTRACS-.../2 (Pack. 2 Pcs)

ARTICLES NOT FOR SALE SINGLY

Article	H mm	€/Pack. 10 pcs	€/Pack. 2 pcs
GIJTRA/	06-08-10-11-12,5-15	•	•
Choose the desired packaging: E.g.: G	IJTRA/10 (Pack. 10 Pcs)		

GIITRA - ... /2 (Pack. 2 Pcs)

ARTICLES NOT FOR SALE SINGLY

THREE-WAYS CAPSULE FND CAPS **EXTERNAL CAPSULE** INTERNAL CAPSULE







IOINTS

CPITR...../..

CTPITR...../...

TPITR..../...

GIITRA .../...

